




Want to buy direct?

www.spiralaudio.com
888.678.0652 / info@spiralaudio.com



INSTALLATION INSTRUCTIONS FOR KT-FI001PB/RB/WP

FIAT 500 2012 - UP

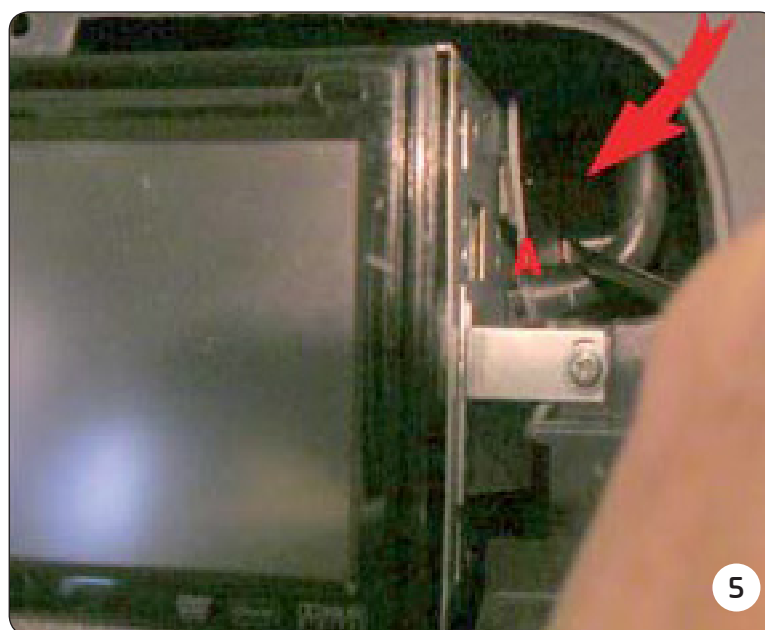

INSTALLATION INSTRUCTIONS FOR KT-FI001PB/RB/WP

- ① Remove the factory radio and the air vent cover
- ② Cut the front of the vent duct as shown. Measure carefully with the mounting cage before the final cut
- ③ Insert the paddles into the cut ducts using the "U" section to guide the right position. Remove the paper and attach the foam block in central position.
- ④ Install the cage in position ensuring correct alignment with the foam block and screw in place
- ⑤ Push the paddles against the sides of the aftermarket radio to ensure correct air flow from the ducts.
- ⑥ Carefully install the housing panel locating the upper clips first and the lower section after